



-Trip

You can also adjust value of the subtraction trip [-TRIP].

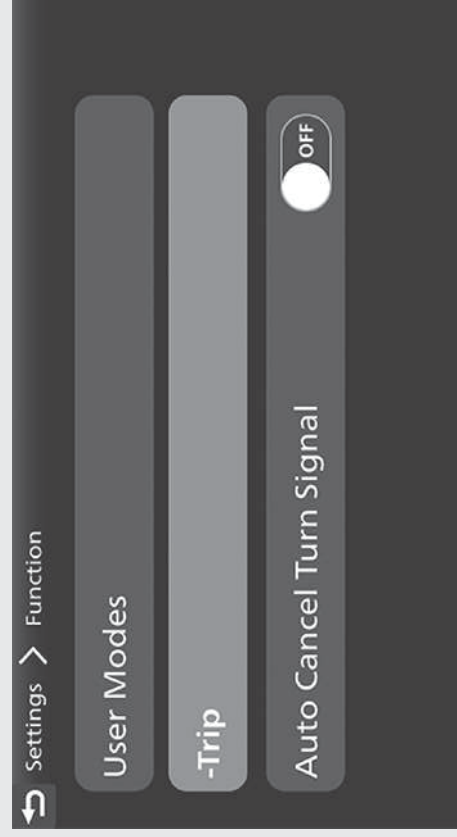

- ▶ Press and hold the sel up switch or sel down switch to advance the figure fast.

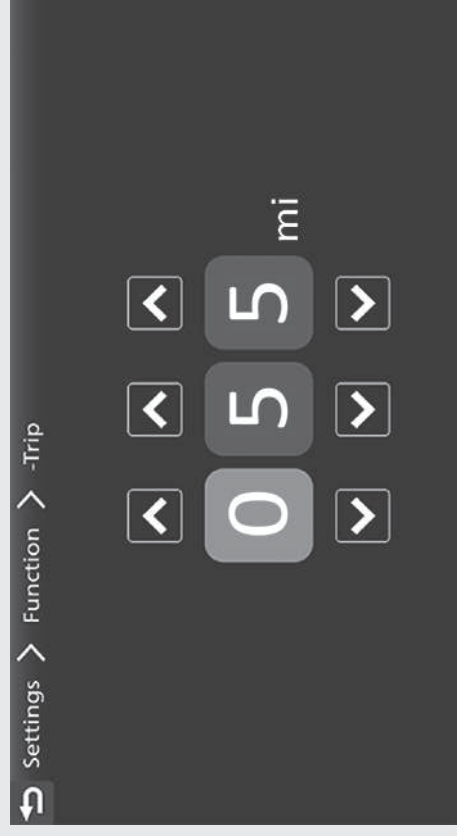

- 1 Select [-Trip], and then press the **ENT** switch.
- 2 Select the digits using the or of the sel left/right switch.
- 3 To increase value: Press the sel up switch, until the desired value is displayed.
To decrease value: Press the sel down switch, until the desired value is displayed.

- 4 Return to the riding information, previous screen or Home screen. **←P.38**
You can also perform the above settings by using the touch screen.

Setting range: 000 to 999
Default: 000