


Brakes

Refer to *Safety Precautions* on page 45.

Front Brake Lever Freeplay

RIGHT SIDE

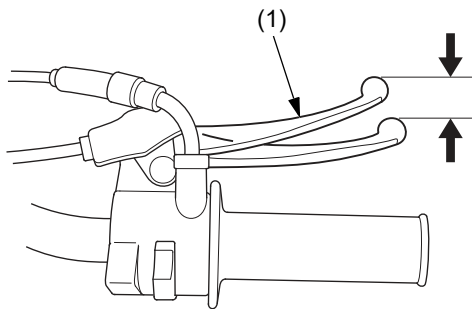

(1) front brake lever

Adjust the freeplay of the brake lever with the front wheel pointed straight ahead.

Inspection

Check freeplay by pulling in slowly on the front brake lever (1) until the brake starts to engage.

Freeplay: 3/8 – 13/16 in (10 – 20 mm)

If necessary, adjust to the specified range.