


Riding with Cruise Control

RIGHT HANDLEBAR

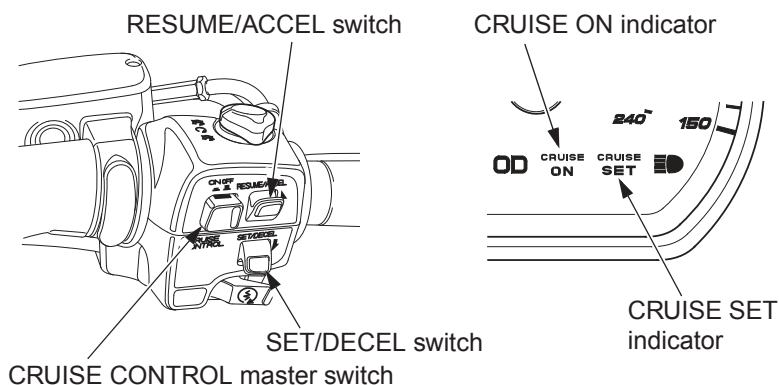

To Set Cruise Control

1. Make sure you are in 4th gear or OD (5th gear), and that your speed is between 30 and 100 mph (48 and 161 km/h). Any speed above 100 mph (161 km/h) will be memorized as 100 mph (161 km/h).
2. Push the CRUISE CONTROL master switch. (The CRUISE ON indicator will come on.)
3. Accelerate to the desired speed.
4. Push the SET/DECEL switch. (The CRUISE SET indicator will come on.)

To Change the Set Speed

To Fine Tune the Set Speed

- To increase the set speed – tap the RESUME/ACCEL switch.
 - To decrease the set speed – tap the SET/DECEL switch.
- Each quick tap (brief push and release) on either switch will change your speed by approximately 1 mph (1.6 km/h).

To Automatically Change the Set Speed

- To increase the set speed – hold the RESUME/ACCEL switch in. The system will accelerate your motorcycle automatically. When you reach the desired speed, release the switch.
- To decrease speed – hold the SEL/DECEL switch in. The system will automatically slow your motorcycle. When you reach the desired speed, release the switch.