
## **Throttle Freeplay**

Refer to Safety Precautions on page 121.



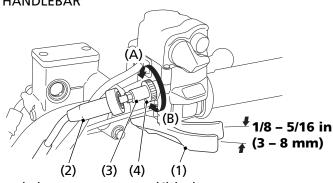

(1) throttle lever

(4) lock nut

(2) rubber sleeve

- (A) decrease freeplay
- (3) throttle cable adjuster
- (B) increase freeplay

## Inspection

Check freeplay at the throttle lever (1).

Freeplay:

1/8 - 5/16 in (3 - 8 mm)

## Adjustment

- 1. Slide the rubber sleeve (2) back to expose the throttle cable adjuster (3).
- 2. Loosen the lock nut (4).
- 3. Turn the adjuster to obtain the correct freeplay.
- 4. Tighten the lock nut and reinstall the sleeve.
- 5. After adjustment, check for smooth operation of the throttle lever from fully closed to fully open in all steering positions.