


# If You Have a Flat Tire

## RIGHT FRONT

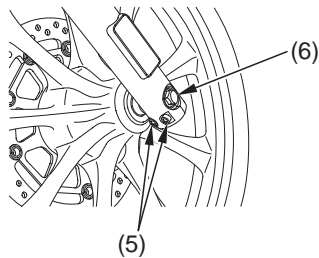


(5) axle pinch bolts    (6) front axle shaft

## Installation

1. Install the side collars and position the wheel between the fork legs. Insert the front axle shaft from the right side, through the right fork leg and wheel hub.
2. Align the index line (7) of the front axle shaft with the recessed surface (8) of the fork leg.

## RIGHT FRONT

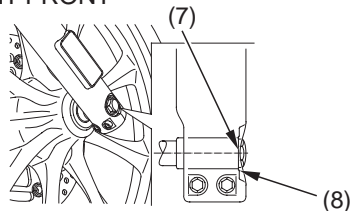

(7) index line    (8) recessed surface  
(cont'd)