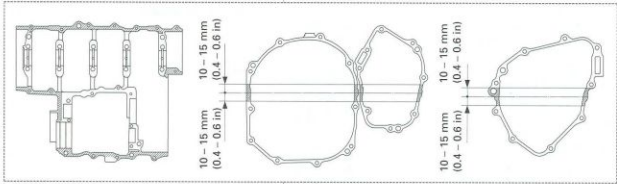
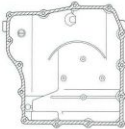
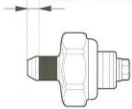


# GENERAL INFORMATION

## LUBRICATION & SEAL POINTS

### ENGINE

LOCATION	MATERIAL	REMARKS
<p>Crankcase mating surface</p> 	<p>Liquid sealant (Three Bond 1207B or equivalent)</p>	
<p>Oil pan mating surface</p>  <p>Oil pressure switch threads</p> <p>Do not apply sealant to the thread head 3 - 4 mm (0.1 - 0.2 in).</p>  <p>Ignition pulse generator cover bolt threads</p> <p>Apply sealant to the thread head 6.5 ± 1 mm</p> <p>Marked "Δ"</p> 