


## FRONT WHEEL/SUSPENSION/STEERING

### ASSEMBLY

#### ⚠ WARNING


- Do not get grease on the brake disc, or stopping power will be reduced.

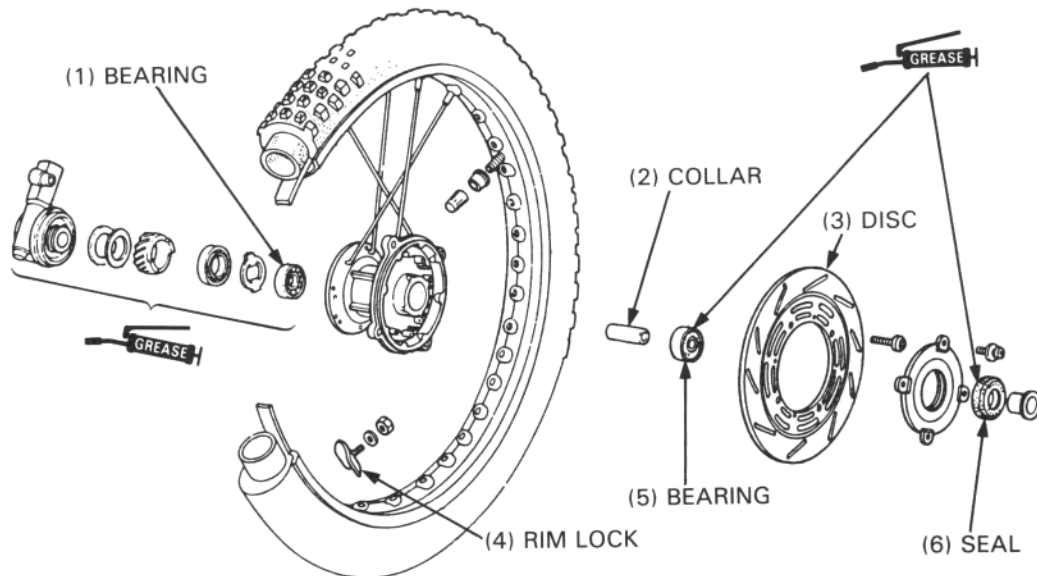

Drive in the right bearing first and then press the distance collar into place.

#### TOOLS:

DRIVER	07749-0010000
ATTACHMENT, 32 x 35 mm	07746-0010100
PILOT, 15 mm	07746-0040300

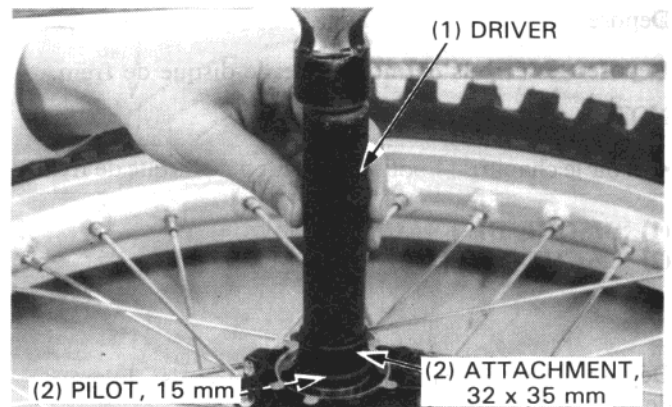

Drive in the left bearing squarely making sure that it is fully seated and that the sealed side is facing out.

