


## REAR WHEEL/BRAKE/SUSPENSION

Lower the rear wheel and attach the upper mount to the frame, then tighten the upper mount.

**TORQUE: 45 N·m (4.5 kg·m, 33 ft·lb)**


(1) UPPER MOUNT NUT

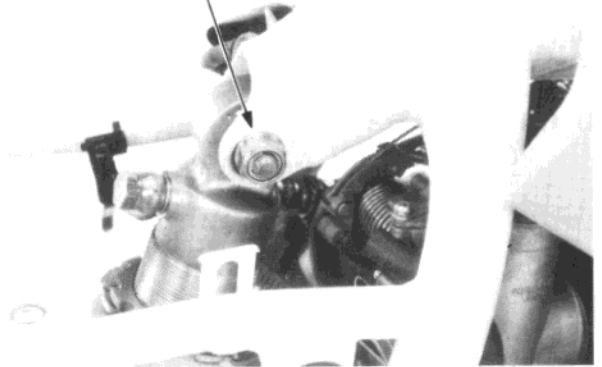


Route the reservoir hose properly (page 1-11) and position the reservoir on the frame as shown.

Install the reservoir clamps and tighten their screws.

(1) SCREWS

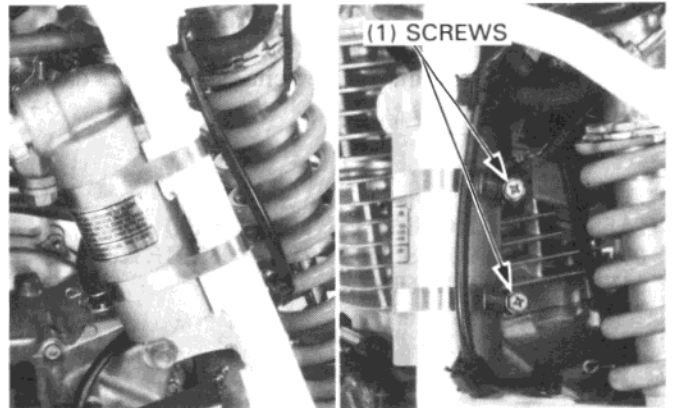

Install the air cleaner, side covers and seat.  
Check the operation of the shock absorber.

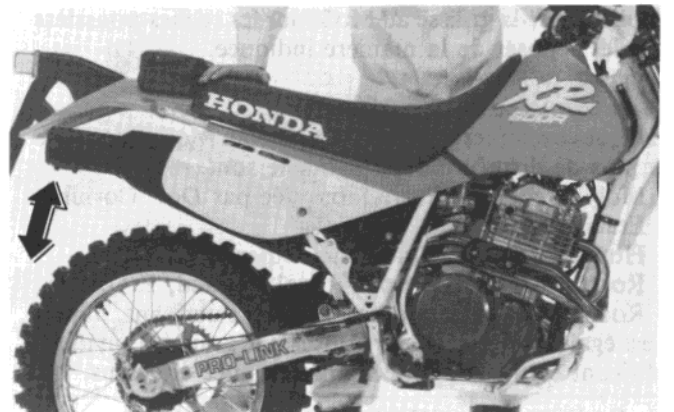

## SWINGARM

### REMOVAL

Remove the following:

- rear wheel (page 13-3).
- chain guide slider and chain cover.

### NOTE

- If the drive chain must be replaced, remove the master link, disconnect the drive chain and remove it without removing the chain guide slider.

(1) SHOCK ARM-TO-SWINGARM PIVOT BOLT

(2) CHAIN COVER

