


## REAR FENDER/EXHAUST PIPE


Remove the four bolts attaching the rear fender to the frame.

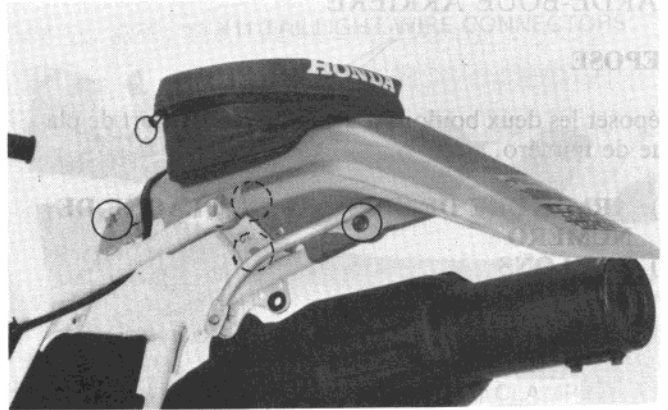

Remove the three nuts attaching the tool bag and the tool bag.

### INSTALLATION

Install the fender in the reverse order of removal.

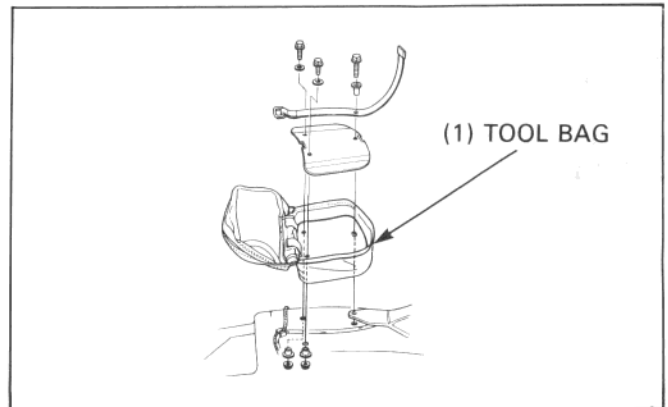

## EXHAUST PIPE

### ⚠ WARNING


- *Do not service the exhaust pipes while they are hot.*

### REMOVAL

Remove the right side cover and the muffler mounting bolts.

Loosen the exhaust pipe clamp bolts and remove the muffler.

Remove the exhaust pipe joint nuts and then remove the exhaust pipe.

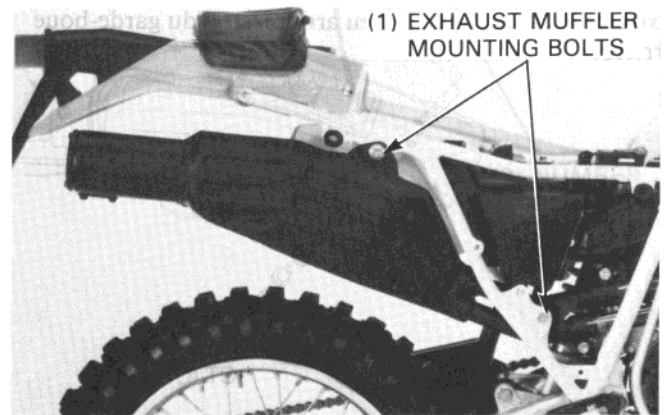

### INSTALLATION

Install the exhaust pipe and muffler in the reverse order of removal.

### TORQUE VALUES:

#### EXHAUST PIPE JOINT NUTS

27 N·m (2.7 kg-m, 20 ft-lb)

#### EXHAUST PIPE CLAMP BOLTS

27 N·m (2.7 kg-m, 20 ft-lb)

#### EXHAUST MUFFLER MOUNTING BOLTS

70 N·m (7.0 kg-m, 51 ft-lb)

