


FRONT WHEEL/SUSPENSION/STEERING

Coat the slider bushing and guide bushing with fork oil.
Install the slider to the outer tube.
Drive in the dust seal to just under the edge of the stopper ring groove, using the special tools.


TOOL:

Fork seal driver


07TMD-MAC0100

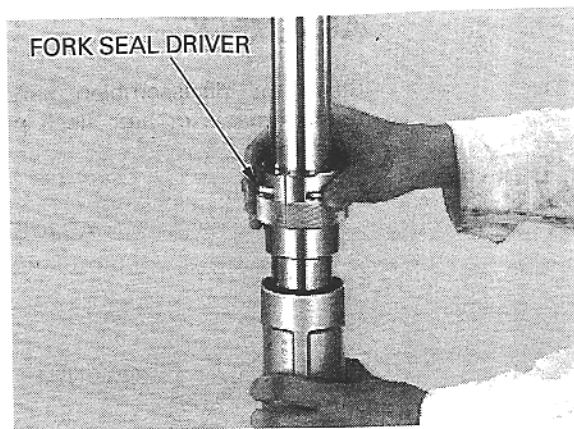

Install the stopper ring.

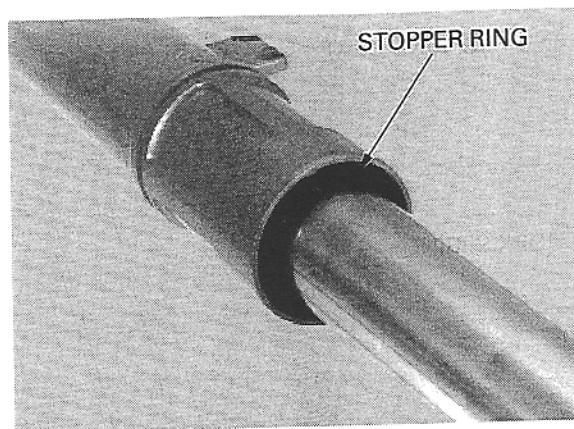

Install the rebound spring onto the piston rod, and then insert the piston rod through the fork damper.

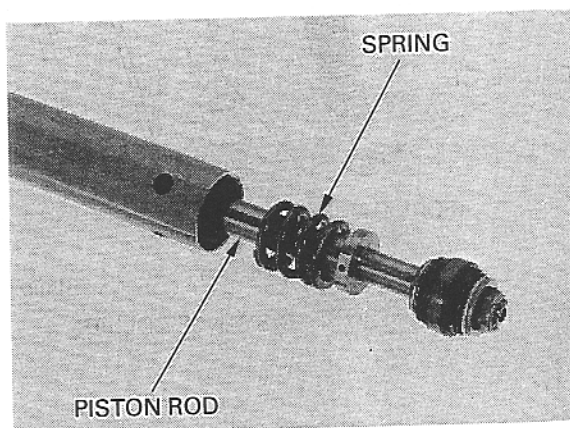

Install the lock nut to the damper rod.

