Rear Brake Fluid Level:

⚠WARNING

- **Brake fluid may cause irritation. Avoid contact with skin or eyes. In case of contact, flush thoroughly with water and call a doctor if your eyes were exposed.**

Check the brake fluid from the inspection window (1) of the right side cover with the motorcycle in an upright position.
Brake fluid must be added to the reservoir whenever the fluid level begins to reach the LOWER level mark (2). Remove the side cover (page 44). Remove the screws (4), reservoir cover (5) and diaphragm (6). Fill the reservoir with DOT 4 BRAKE FLUID from a sealed container up to the UPPER level mark (3). Reinstall the diaphragm and cover. Tighten the screws securely.

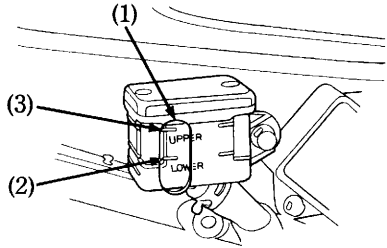

(1) Inspection window (3) UPPER level mark
(2) LOWER level mark

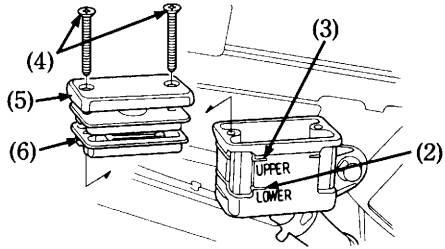

(4) Screws (6) Diaphragm
(5) Reservoir cover