

To check and adjust brake lever free play:

Measure the distance the rear brake lever moves before the brake starts to take hold. Free play, measured at the tip of the brake lever (Fig. 4-26 ), should be:

15–20 mm (0.6–0.8 in)

To adjust the free play, turn the brake lever adjusting nut (2), (Fig. 4-25 ), located on the brake operating rod at the rear of the frame. Make sure the cut-out on the adjusting nut is properly seated on the brake arm pin (3).

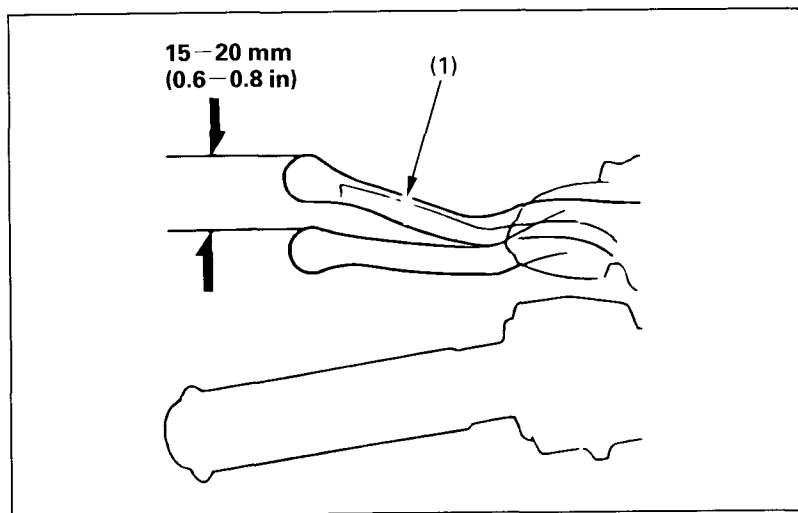


Fig. 4-26

(1) Brake lever