
## Tire Puncture ► Removing Wheels

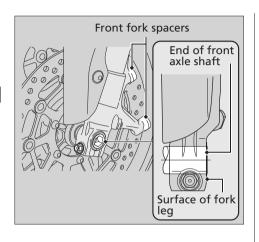

- **4.** Tighten the left axle pinch bolt to hold the axle.
- 5. Tighten the axle bolt.

**Torque:** 44 lbf·ft (59 N·m, 6.0 kgf·m).

- **6.** Loosen the left axle pinch bolt.
- **7.** Tighten the right axle pinch bolt.

Torque: 16 lbf·ft (22 N·m, 2.2 kgf·m).

- **8.** Make sure that the front fork spacers are installed into the caliper bracket properly.
- **9.** Install the right brake caliper and tighten the mounting bolts.

**Torque:** 33 lbf·ft (45 N·m, 4.6 kgf·m).