


# BATTERY

## REMOVAL

- Remove the seat.
- Remove the battery holder.
- Disconnect the negative cable at the battery.
- Disconnect the positive cable at the battery.
- Remove the battery.

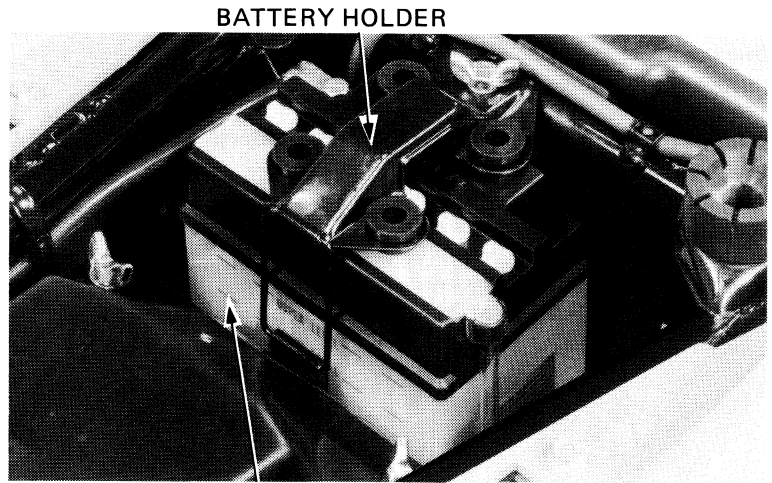

BATTERY

## TESTING SPECIFIC GRAVITY


Test each cell with a hydrometer.

**SPECIFIC GRAVITY: 1.270–1.290 (20°C, 68°F)**

1,270–1.290	Fully charged
Below 1.260	Undercharged

### NOTE

- The battery must be recharged if the specific gravity is below 1.230.
- The specific gravity varies with the temperature as shown in the accompanying table.
- Replace the battery if sulfation is evident or if the space below the cell plates is filled with sediment.

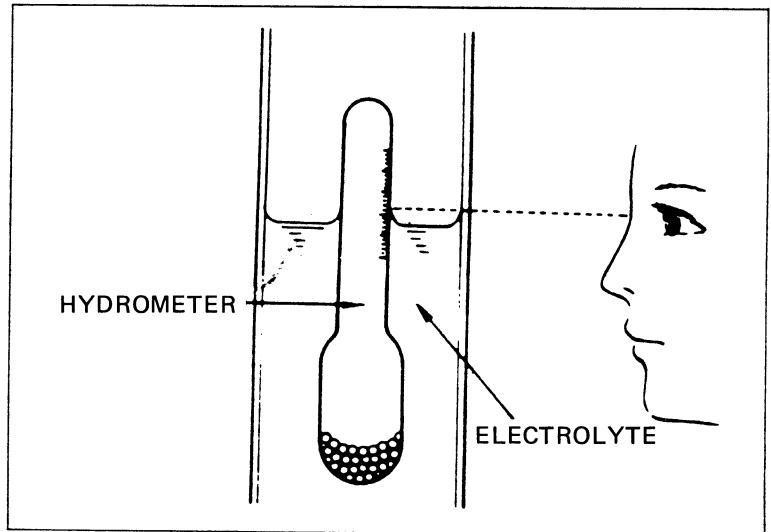

### WARNING

*The battery contains sulfuric acid. Avoid contact with skin, eyes, or clothing. Antidote: Flush with water and get prompt medical attention.*

