



## Rear Wheel

### Removal

1. Park on a firm, level surface.
2. Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.
3. Loosen the rear axle nut.
4. Turn both adjusters so the rear wheel can be moved all the way forward for maximum drive chain slack.
5. Remove the rear axle nut.

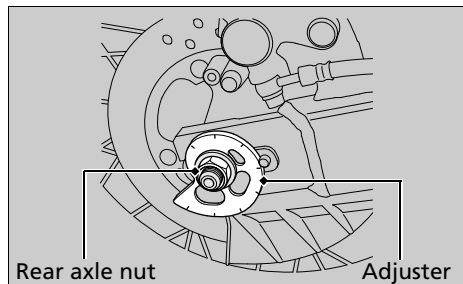

6. Remove the drive chain from the rear wheel sprocket by pushing the rear wheel forward.

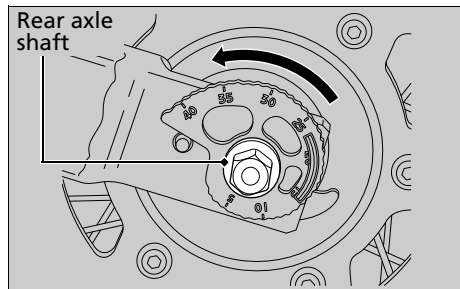

7. Remove the rear axle shaft, adjusters.
8. Remove the brake caliper bracket, rear wheel and side collars.
  - Support the brake caliper so that it doesn't hang from the brake hose. Do not twist the brake hose.
  - Avoid getting grease, oil, or dirt on the disc or pad surfaces.