


3. Remove the front axle shaft (3), front wheel and side collars.

Avoid getting grease, oil, or dirt on the disc or pad surfaces. Any contamination can cause poor brake performance or rapid pad wear after reassembly.

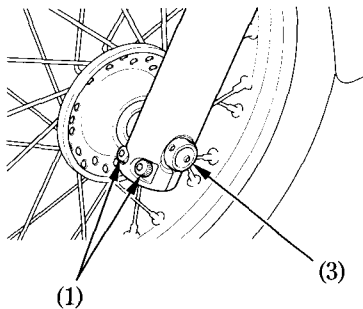

- (1) Axle pinch bolts
- (3) Front axle shaft


Installation:

1. Install the side collars into the left and right side wheel hub.

Position the front wheel between the fork legs and insert the front axle shaft from the left side, through the left fork leg and wheel hub.

To avoid damaging the brake pads, carefully fit the brake disc (4) between the pads.

2. Align the index line (5) of the front axle shaft with the surface (6) of the fork leg.

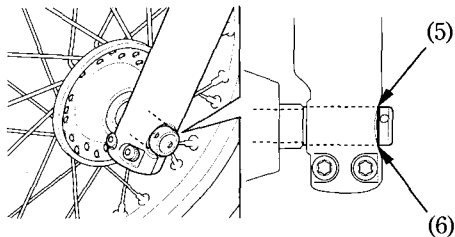

- (5) Index line

- (6) Surface