


Connect the front brake cable.

Adjust the front brake (Page 3-14).

With the front brake applied, pump the front forks up and down several times to seat the axle and check front brake operation.

**FRONT BRAKE CABLE**

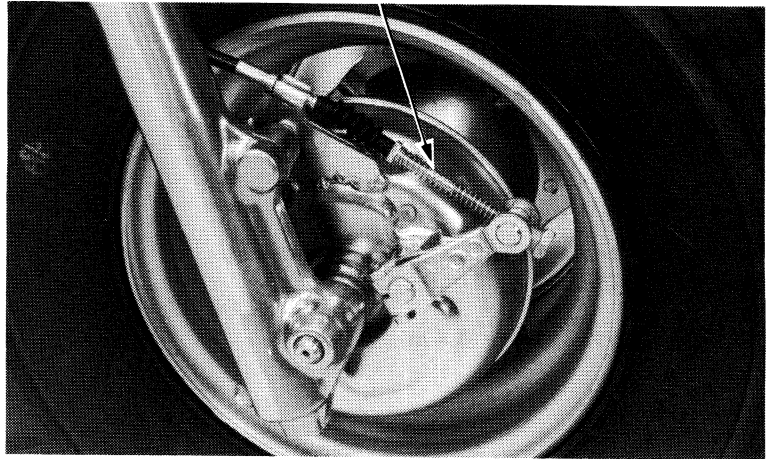

Tighten the axle shaft holder nuts; the upper nuts first, then the lower nuts.

**TORQUE: 10–14 N·m**  
**(1.0–1.4 kg·m, 7–10 ft·lb)**

**AXLE HOLDER NUTS**

